



THANK YOU

for purchasing the #1 safe in America!



LIMITED **5-YEAR** WARRANTY

USE & CARE MANUAL

To activate your 5-YEAR WARRANTY go to

WWW.LIBERTYSAFE.COM

Click on the **REGISTER WARRANTY** button on the home page to complete registration and print out warranty confirmation.

You will need the serial number of your safe to register

LIBERTY SAFE AND SECURITY PRODUCTS, INC.
FIVE-YEAR LIMITED WARRANTY

Five-Year Limited Warranty: Liberty Safe and Security Products, Inc. (Liberty) is proud of the workmanship of the product you have just purchased. Liberty warrants that each new safe will be free from defects in material and workmanship for five years after purchase. If there is a defect in either materials or workmanship during the five-year period after purchase, we will repair or replace your safe at no cost.

Liberty's obligation under the Limited Warranty is limited to the repair (including labor) or replacement of any product that proves to be defective with a product of like size and type. Claims shall be made under this warranty by calling or writing to Liberty Safe.

Liberty takes seriously its obligation to stand behind its product with this Limited Warranty as long as the safe is properly installed and cared for as instructed in the Owner's Use and Care Manual. The Limited Warranty does not apply to safes or parts that have been misused, neglected or subjected to unusual or extreme conditions and/or environments, or to unreasonable wear and tear. Changing or modifying the safe in ways that affect its intended use will void the Limited Warranty. As a special service to you, this Limited Warranty can be transferred to subsequent purchasers or owners.

Limitation of Remedies: In no case shall Liberty be liable for any special, incidental, or consequential damages based upon breach of warranty, breach of contract, negligence, strict tort, or any other legal theory. Such damages include, but are not limited to, loss of profits, loss of savings or revenue, loss of the contents of the safe or vault door, loss of use of the safe or vault door, or any associated equipment, cost of capital, cost of any substitute equipment, facilities or services, downtime, the claims of third parties including customers, and injury to property.

Warranty Registration Card: The attached registration card showing the serial number of the product and original purchaser information must be on record with Liberty within thirty (30) days of purchase to validate this warranty. Failure to register the product shall void any warranty.

No Other Warranties: This agreement is understood to be the complete and exclusive agreement between the parties, superseding all prior agreements, oral or written, and all other communications between the parties relating to the subject matter of this agreement. No employee of Liberty or any other party is authorized to make any warranty in addition to those made in this agreement.

THIS WARRANTY PERTAINS ONLY TO THE LIBERTY SAFE ITSELF, AND DOES NOT EXTEND TO THE CONTENTS OF THE SAFE. FOR OPTIMAL SECURITY AND PROTECTION, SAFES SHOULD BE BOLTED TO THE FLOOR. PLEASE REFER TO YOUR USE & CARE MANUAL FOR DETAILS ON ANCHORING YOUR SAFE TO THE FLOOR.

Disclaimer of Warranty: THE ABOVE WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH EXTENDS BEYOND THE WARRANTY SPECIFIED ABOVE, AND IN NO EVENT SHALL THIS WARRANTY BE DEEMED TO COVER INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND.

Venue and Choice of Law: Any claims arising from this limited warranty shall be resolved in the State of Utah and Utah law will apply to any dispute.

Congratulations on your purchase of your new security safe designed by America's #1 gun safe company—Liberty Safe! To insure proper set up and installation, **PLEASE READ THIS USE AND CARE MANUAL** before opening your safe.



SAFETY PRECAUTIONS

The safe door is heavy. Do not open the door with the safe on an uneven or unstable floor. Hanging on an open door may cause the safe to tip forward when not lag-bolted to the floor, resulting in serious injury or death to yourself or others. If you have or have occasion to have small children in your home, please make sure you never leave your safe unsecured. It is possible for small children to climb inside your safe and become locked in. This could result in serious injury or death.

INSPECT YOUR SAFE

Inspect your safe for shipping damage as soon as you receive it. If you find any damage, please contact the delivery company (or carrier) immediately. Any damage not noted upon delivery must be reported within fifteen (15) days or there will be no recourse.

SERIAL NUMBER & MASTER COMBINATION (See opening instructions before proceeding)

Place serial number and combination here

Your safe's **serial number** is located in two (2) locations on the safe. One is located on the top of the safe, back right side (may also be on the back of the safe, top left side). The second is located just inside the door by the chrome bolts. Compare the serial number in this manual with the serial number on the safe. All serial numbers should match. If they do not, contact your local dealer or Liberty Safe immediately. **You will need your safe serial number when contacting customer service about your safe.**



PLEASE NOTE: Record your safe's serial number and combination and store in a secure location *OTHER THAN YOUR SAFE.*

Contents:

1 – Safe Packet (Owner manual with warranty card)


One of the following Interiors

1 – **3-in-1** Flex Interior: 2 – Side Shelf, 1 – Cover Shelf, 1 – Gun Rack, 1 – Top Shelf,


1 – Center Divider, 16 shelf clips

Or

1 – All gun interior including: 1 – Top Shelf, 1 – Gun Rack, 8 – Shelf Clips

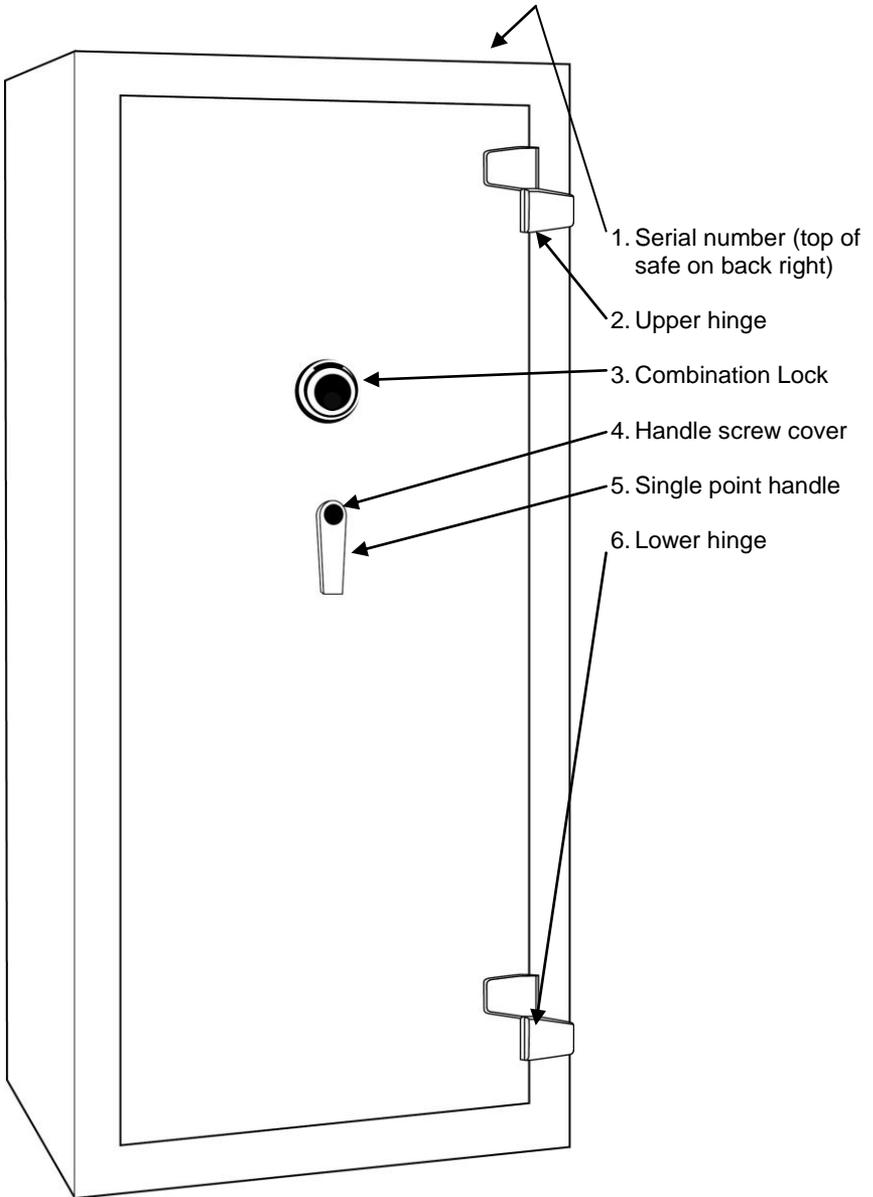

Ez-Access Interior

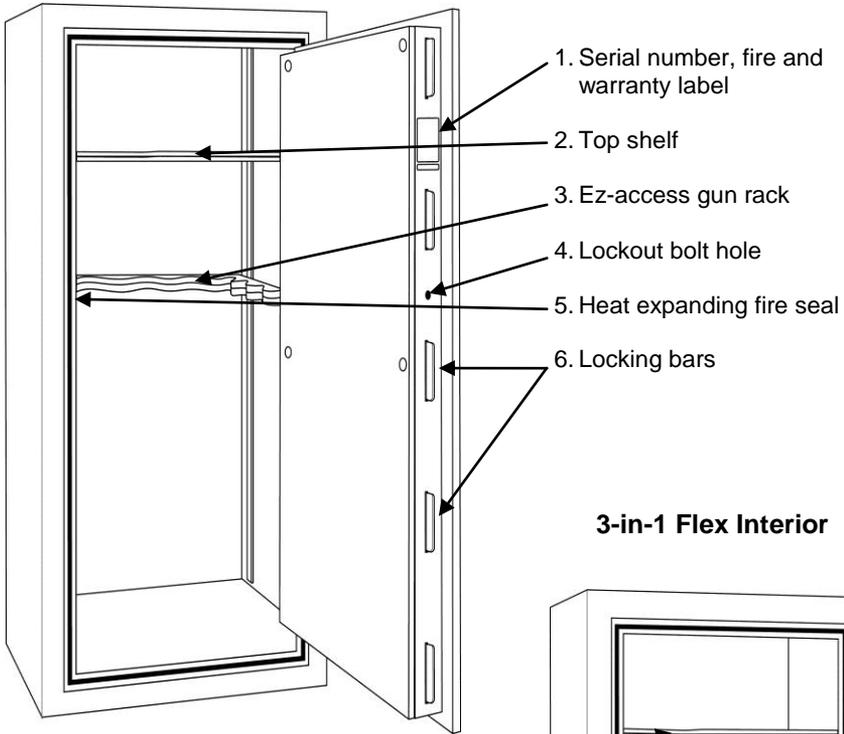

3-in-1 Flex Interior

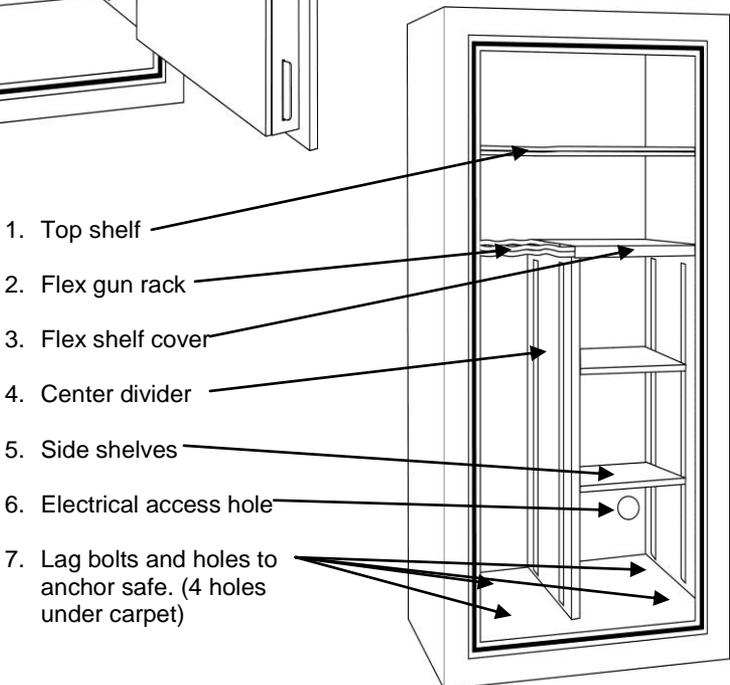


TABLE OF CONTENTS

Safety Pre-Cautions.....1

Contents.....2

Serial Number and Combination.....2

Product Specification.....3

Opening Your Safe.....6

Moving Your Safe.....7

Placement of Your Safe.....7

Removing the Safe from Pallet.....7

Anchoring Your Safe.....7

Using and Maintaining Your Safe.....8

Loading Your Safe.....8

Lost Combination.....8

Troubleshooting Guide.....9

Frequently Asked Questions.....10

Warranty Claims and Repairs.....10

Accessories.....11

OPENING YOUR SAFE

OPENING SAFE FOR THE FIRST TIME

NOTICE: Your safe is shipped with the door unlocked. Please **OPEN SAFE DOOR before verifying your combination**. If we encounter problems, it is easier to service the lock or mechanism with the door open. While the DOOR IS OPEN, straighten the handle to extend the door bolts. **Remove the adhesive from the dial** so that the dial turns freely. You can now verify your combination by following the instructions below.

VERIFYING THE COMBINATION

The combination lock on your safe has been set randomly at the factory. As mentioned above, it is recommended that you verify the combination a few times before using the safe and while the door is open. **If you move the safe after verifying the lock, it is also strongly recommended to follow this procedure again after moving the safe to its permanent or new location.**

LOCK—OPENING INSTRUCTIONS

The lock requires accurate alignment with the index mark (located at twelve noon on the dial ring). Always turn the dial slowly and steadily when entering your combination to avoid dialing past your numbers. **Never spin the dial rapidly back and forth as this may cause damage to the lock.** If you go past any number - even if by only a half a number - the entire combination must be re-dialed. To verify your combination, follow the four steps below. Copy your combination numbers from page 2 to the spaces below.



Step 1

Turn the dial counterclockwise (**LEFT**) at least 3 times stopping on the **1st** number at the index mark.

1st # _____



Step 2

Turn the dial clockwise (**RIGHT**) passing the **2nd** number once. Stop on it the **2nd** time.

2nd # _____



Step 3

Turn the dial counterclockwise (**LEFT**) and stop on the **3rd** number.

3rd # _____

Step 4 – If combination is entered correctly, you will be able to turn the safe handle.

⚠ IF COMBINATION DOES NOT WORK, **DO NOT CLOSE THE DOOR!** Try Again. Refer to the TROUBLE SHOOTING GUIDE in the back of this manual for more help.

MOVING YOUR SAFE



SAFETY PRECAUTIONS

Before moving the safe, make sure you have completely tested the combination and lock to assure it will open properly prior to removing the safe from the pallet and to its final location. Safe doors are NOT designed to be removed due to possible serious injury. Never move the safe with the door open. Do not open the door with safe lying down. Safes are very heavy and awkward to handle. Only use of proper moving equipment by a trained professional is recommended. Using a standard refrigerator dolly is very dangerous and can cause injury or death.

PLACEMENT OF YOUR SAFE

Before moving your safe, verify the load bearing weight of the floors and stairs, and types of flooring the safe will be moved over (tile, wood, and other flooring can be damaged by the weight of the safe). To determine whether or not your safe will make it through doorways, stairs or corners, take the empty safe box and see if it will fit all the way through to its final location.



Proper installation and anchoring are critical to the security of your safe. Make sure you consider the following:

- Install near a load-bearing wall as a precaution to supporting the weight of the safe.
- To help protect the exterior finish of your safe, install inside your home in a dry location where there is climate control (heat in the winter and cooling in the summer).
- The safes fire rating depends upon the number of layers of fireboard and BTU rating. Generally speaking, fire safes perform better in lower levels of a home (like the basement) where fire temperatures are lower. Additionally, placement of your safe away from potential hot spots (areas where flammable materials are stored) will improve your chances that your safe and its contents will perform better in a home fire. No safe is completely fireproof. If the fire reaches a high enough temperature for long periods, fire damage may occur.
- To store photographs, negatives, CD's or other electronic media, a Media Cooler Storage unit inside your safe is recommended for heat sensitive items.

REMOVING THE SAFE FROM PALLET

With the safe upright and open, fold back the carpeted floor and pry up the black plastic caps to expose the lag bolts. Use a 17mm socket & ratchet to remove the bolts. **Caution: Have someone steady the safe while removing the safe from the pallet to prevent the safe from tipping off the pallet.** To prevent accidental opening while removing the safe from the pallet and to its final location, close the door and rotate the handle extending the locking bars. Make sure you have adequate help to move the safe off its pallet. Carefully slide the safe off the pallet until one edge is resting on the floor. While the safe is tilted on its edge, remove the pallet out from under the safe. Carefully lower the safe back to its upright position.

ANCHORING YOUR SAFE

To achieve the highest level of security it is **STRONGLY RECOMMENDED** that you anchor your safe securely to the floor. We recommend placing a protective barrier (such as a piece of carpet, treated wood or rubber mat) between the safe and floor to prevent scratching of the safe surface, which could lead to rust. Before anchoring safe, make sure the safe is level. Use redwood door shims to adjust safe level so the door has the desired swing. Use appropriate hardware for the wood or cement surface you are anchoring to.

ANCHORING YOUR SAFE (CONTINUED)

Anchoring kits with instructions are available from your dealer. Given enough time it is possible for a thief to break into a safe. Securing it to the floor helps secure and prevent removal of the safe by thieves.

USING & MAINTAINING YOUR SAFE

LOADING YOUR SAFE

- When putting guns into your safe, make sure they rest securely against the cutouts provided to prevent accidental tipping when the door is closed.
- If you are storing electronic media, use a Media Cooler to provide additional protection (See your local dealer or visit www.libertysafe.com).
- Do not put anything in your safe that will put pressure against the door, or the locking bars when the door is closed.
- If you live in a humid environment, it is recommended that you use a **dehumidifier** or **desiccant** to protect the contents from rust or mildew. Dehumidifiers and other moisture reducing products suitable for your safe are available from your dealer. Do not install or store these devices, or any other personal contents, near the locking bars on the door as this could interfere with the function of the mechanism in the door.

CLEANING AND MAINTAINING YOUR SAFE

- **The Combination Lock** – The combination lock does not require any type of service.
- **Internal Locking Mechanism** – The advanced locking mechanism requires no maintenance. Opening the door panel of your safe by anyone other than a certified lock or safe technician may void your warranty.
- **Exterior** – Use a soft, non-abrasive cloth dampened with water to clean the textured surface. Other materials may cloud or scratch the finish of your safe:
 - Logos and other graphic images must be wiped gently. Never rub or polish
 - The lock and handle have a protective coating to prevent tarnish. **DO NOT** use metal polishes or solvents for cleaning. Simply wipe off with a soft cloth.
 - Scratches and other blemishes may be touched up with a paint touch-up kit available from your dealer.
- **Door Seal** – The door seal does not need maintenance unless it is ripped or destroyed. If the seal becomes damaged, call for replacement pieces.

LOST COMBINATION

The lock on your safe has been set with a randomly selected combination at the time of manufacturing. As part of our continuing service, a record of your combination by serial number is kept on file. If you lose your combination, you can retrieve a copy for a \$25.00 research fee. A Combination request form must be filled out and faxed along with a copy of the sales receipt to: **(801) 465-2712**. You can print a form from our website www.libertysafe.com under the Support tab or have one faxed or mailed by calling our toll free customer service line at (800) 247-5625, and press 4.

TROUBLE SHOOTING

Problem _____ Possible Solution _____

Combination Works But Handle Will Not Turn Corner protectors (packaging material) may cause undue pressure on the locking bolts. To alleviate the pressure push in on the door while turning the handle until resistance decreases, then pull to open the safe. If the handle turns partially the bars may be jammed or caught up. Try rotating the handle back and forth (left to right) until the bars free up.

Combination Works and Handle Turns But Safe Will Not Open Verify that the handle has been completely rotated before opening the door. Check the **5/16" Allen set screw**, located on the face of the handle under the black plastic cover, for tightness. Some safes are installed with a unique handle clutch mechanism. Improper personal storage or excess door adjustment may cause clutch to temporarily engage. Push in on the door while turning the handle, and when resistance decreases, pull to open.

Combination Will Not Open the Safe Check lock-bolt pressure. Some free play should exist in the handle, left to right.

1. Redial the complete combination stopping on the third number. Hold the dial, shake the handle back and forth. **PLEASE NOTE:** If your lock still does not open, it is possible that one or more of your numbers may be off slightly from those shown in this manual.
2. Try dialing 1 number up or 1 down from each number in the combination. If it opens with a new number, update your combination in this book and report it to Liberty Safe (800) 247-5625, Press 0.
3. Try pulling out on the dial while dialing the combination.

Combination Opens the Safe Intermittently Check lock-bolt pressure. Some free play should exist in the handle, left to right. Try dialing the combination again. Bolt pressure may be due to out of place interior shelves or improper personal storage (i.e. gun barrels, items too big for shelves).

Combination Dial Is Tight or Will Not Turn Check lock-bolt pressure. Some free play should exist in the handle, left to right. Bolt pressure may be due to out of place interior shelves or improper personal storage. Make sure the locking bars are in the fully extended position with the door completely closed or completely open. Normally dial tightness varies from safe to safe. Tightness of dial may increase or decrease as dial is being turned.

TROUBLE SHOOTING (CONTINUED)

Problem	Possible Solution
Door Will Not Shut	Verify that the lock is unlocked and the locking bars are fully retracted. Make sure the interior shelves are pushed back as far as possible. The handle should travel the same distance with the door closed as it does with the door open all of the way.
Door Shuts But Will Not Lock	Verify that the door is shut completely, the handle rotated completely and locking bars extended to their locked position. Then rotate the dial to lock the safe. Verify that interior shelves are pushed back as far as possible

FREQUENTLY ASKED QUESTIONS

Q. Can I change the safe's combination?

A. The combination on this lock cannot be changed.

Q. Why is the handle pointing in a different direction than it used to be?

A. The handle has a built in clutch mechanism. When the handle is forced it will slip left, or right. To reset it simply force it back to its original position when locked.

Q. What if I lose my combination?

A. If you lose your combination, you can retrieve a copy for a \$25.00 research fee. A Combination request form must be filled out and faxed along with a copy of the sales receipt to: **(801) 465-2712**. You can print a form from our website www.libertysafe.com under the Support tab or have one faxed or mailed by calling our toll free customer service line at (800) 247-5625, and press 4.



Wish you could remember your combination when you really need it? Now you can!

Introducing Liberty's COMBO VAULT retrieval system.

At no cost to you, this system allows you to store your combination through a special encrypted program where only you have access to the information that you submitted. Combo Vault uses SSL encryption as well as proprietary security systems and methods to ensure your data is secure. To learn more visit www.libertysafe.com.

Warranty Claims and Repairs

WARRANTY CLAIMS

Please read carefully the safe warranty that accompanied your safe, located on the cover of this manual. If you encounter a problem that falls under the warranty coverage, simply call one of our representatives at (800) 247-5625, press 0. You will be required to provide the serial number and proof of ownership if you have not registered your safe or mailed in your warranty registration. Please note that the five-year limited warranty covers defects in materials and workmanship only, and does not cover damage to the safe from fire, water, break-in or break-in attempt, or to the safe's contents. We recommend you obtain insurance coverage for the contents of your safe.

WARRANTY REPAIRS

Repairs to your safe covered under your warranty should not be performed without the pre-authorization of a Liberty customer service representative. If there are any issues regarding your safe please contact a Liberty Safe customer service representative at (800) 247-5625. Solutions to frequently asked questions and issues can also be found in Trouble Shooting Guide in this booklet or on line at www.libertysafe.com. The cost of any repairs performed without pre-authorization will be the sole responsibility of the owner.

WATER DAMAGE

Your safe is not waterproof. Should your safe be exposed to water, the fire insulation of your safe will be compromised. Do not continue to store items in a safe that has been compromised by water. You should purchase a replacement model for continued fire protection. In the event of flooding or water damage, make sure to have your safe opened as quickly as possible. If your safe included firearms, remove them and have them cleaned and lubricated immediately. Damage to the safe from fire, water and break-in is not included in the five-year limited warranty.

INSURANCE COVERAGE

i **LIBERTY SAFE DOES NOT INSURE THE CONTENTS OF YOUR SAFE.** A homeowners policy or other insurance coverage should be purchased in an amount sufficient to cover the contents. Most homeowners policies require the purchase of riders or endorsements on items such as guns, jewelry coins and other valuable collectibles. Should damage occur to your valuables, a claim should be made with your homeowners insurance. Check with your local insurance company for possible discounts that may be available with your purchase.

Optional Safe Accessories

Order online at libertysafe.com or visit your dealer

ILLUMINATE YOUR SAFE



LED 5 Wand Light Kit
12-24 Size Gun Safes



LED Light Safe Kits



Safe Power Outlet Kit

EXTRA SECURITY




Danger Black Powder Sticker



Safe Anchoring Kit

ORGANIZE YOUR FIREARMS

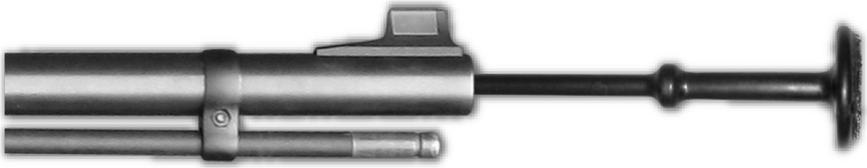

Rifle Rod Starter Kit - 20 Pack Rifle Rod Starter Kit - 10 Pack

Rifle Rod Add-On - 6 Pack

Rifle Rod Add-On .17 Caliber - 2 Pack



Handgun Hangers
Over/Under -2 Pack



Handgun Hangers
4 Pack



Oak Pistol Rack
Beige Fabric

Oak Pistol Rack
Silver Fabric

Order online at libertysafe.com or visit your dealer

ORGANIZE YOUR VALUABLES



Jewelry Drawers
Available in Various Sizes



Electronic Media Cooler



Accessory Door Panel
Available in these sizes:

Model 12

Model 18

Model 24

Order online at libertysafe.com or visit your dealer


KEEP YOUR VALUABLES DRY



Eva-Dry
Moisture Remover



Desiccant Moisture
Remover 750g

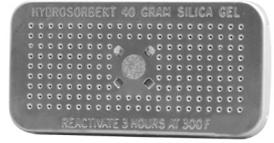

Mini-Canister
Moisture Remover
40g



Electric
PEET Dryer



Electric
Dehumidifier

Order online at libertysafe.com or visit your dealer



Register your 5-YEAR WARRANTY online at:
WWW.LIBERTYSAFE.COM



Copyright © 2012 Liberty Safe and Security Products, Inc.
1199 West Utah Avenue Payson, UT 84651 • 800.247.5625

P/N 10830-12