



## Premier User Instructions

### General

The lock operates with a six-digit code. When pressed, each key is confirmed with an audio and LED signal.

After entry of a valid code a double signal will follow. An invalid entry is followed by a long signal. After 10 seconds without entry, current code being entered will be cancelled.

The lock comes standard with a night light. To activate the light, press the light bulb on the lower left side of the keypad before entering your code.

### Open

Enter code (Factory User code = 1-2-3-4-5-6), unlock door and open. If not opened within 3 seconds, the lock secures automatically. If code entry failed on first attempt wait 20 seconds before re-entering.

#### Locking:

Close door and turn handle fully to closing position. The lock is secured. Verify locked status by trying to turn handle back.

#### Manipulation protection:

Entry of four consecutive invalid codes-keypad is blocked for 5 minutes. During this period, the LED flashes every 10 seconds and any key pressed causes a long signal. After expiration, entry of two more invalid codes, restarts the 5 minute blocking period.

#### Security reference:

All codes are to be securely stored. Do not use personal data (i.e. birthdays, telephone numbers etc.) as the code.

### Change Code (With Safe Door OPEN)

**Press and Hold** Key [0] until double signal. The LED remains on during the following actions:

- Enter old code (double signal)
- Enter new code (double signal) and repeat new code (double signal)
- Try new code
- In case of entry errors (long signal), the old code remains valid.

### Battery Low Warning and Battery Change

A series of signals indicates that the battery is weak and must be replaced. Use only 9V ALKALINE—batteries! The battery compartment is located at the bottom of the entry unit.

***Fresh Duracell and Energizer Batteries Recommended***