

INCLUDES 4 WOOD BOLTS  
AND 4 WASHERS



## TOOLS REQUIRED



DRILL



9/16" SOCKET SET



SHOP  
VACUUM




©2013 Liberty Safe & Security  
Products, Inc.

www.libertysafe.com  
(800) 247-5625

# WOOD INSTALLATION INSTRUCTIONS (10914)

Remove pallet and place safe in desired location. Follow these instructions to secure your safe to the floor:

1. Open door and remove floor caps under floor panels.

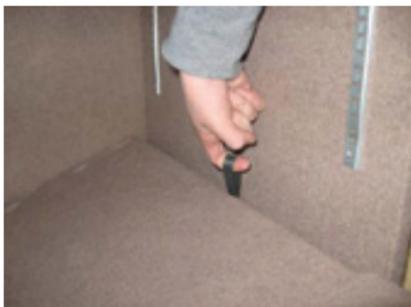

2. Drill a 1/4" hole in each of the 4 anchoring locations with a drill using a 1/4" wood drill bit approximately 2 1/2" to 3" deep.
3. Use a vacuum to clean up debris created from drilling holes.
4. Place provided washers on 9/16" anchor bolts and secure in recently drilled holes using a socket wrench or drill to tighten down the anchor bolts.
5. Replace floor caps and floor panels

**NOTE:** Anchoring kits are the #1 security add-on for safes. Available for both wood and concrete floors. While a safe offers burglary protection, and anchoring the safe to the floor provides additional protection, with enough time any safe can be forcibly entered or removed from its secure location. It is impossible to build or install a "burglary-proof" safe.